

Width	12"	18"	24"	30"	36"	42"	48"	54"	60"	66"	72"	78"	84"	90"	96"
1/4	1.6	2.4	3.2	4	4.8	5.6	6.4	7.2	8	8.8	9.6	10.4	11.2	12	12.8
5/16	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
3/8	2.4	3.6	4.8	6	7.2	8.4	9.6	10.8	12	13.2	14.4	15.4	16.8	18	19.2
2.8	2.8	4.2	5.6	7	8.4	9.8	11.2	12.6	14	15.4	16.8	18.2	19.6	21	22.4
1/2	3.2	4.8	6.4	8	9.6	11.2	12.8	14.4	16	17.6	19.2	20.8	22.4	24	25.6
9/16	3.6	5.4	7.2	9	10.8	12.6	14.4	16.2	18	19.8	21.6	23.4	25.2	27	28.8
5/8	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32
3/4	4.8	7.2	9.6	12	14.4	16.8	19.2	21.6	24	26.4	28.8	31.2	33.6	36	38.4
1	6.4	9.6	12.8	16	19.2	22.4	25.6	28.8	32	35.2	38.4	41.6	44.8	48	51.2

To Calculate Belt weight (lbs) per foot find the thickness of your belt on the chart above and match it up with the width of your belt. The corresponding cell is the belt weight per foot. For example if you have 9/16" belt that is 48" wide it would weigh 14.4 lb/ft.